


## Coatings for ultra-high performance optoSiC-PLUS<sup>®</sup> mirrors **SCANcoat 960-H for high power lasers**

SCANcoat 960-H is a surface-tension reduced coating to minimize coating induced wavefront deformation, giving high reflectivity for high power lasersystems requirements when used under large angles of incidence on common galvano-scanning systems.

Coated optoSiC-PLUS<sup>®</sup>-mirrors can withstand strong laser radiation at high power and high energy densities. For other wavelength are dedicated standard coatings available and many other coatings on request. Please refer to technical datasheets for SCANcoat coatings available on optoSiC-PLUS<sup>®</sup> or see download-links on homepage and ask our sales people for further choices on other specialized coatings.

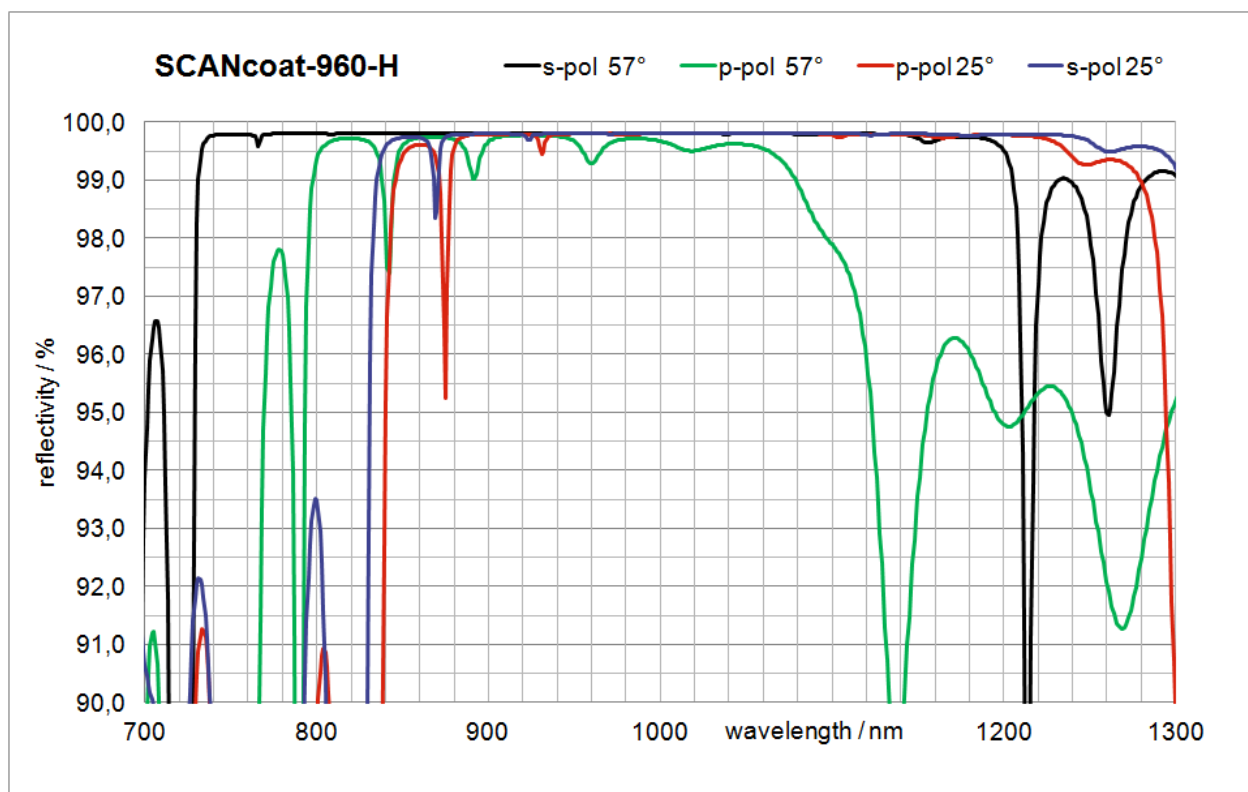

GENERAL	PROPERTIES	Typical values	
COATING	Wavelength [ $\lambda_1$ ] (nm)	870...1050	s. spectrum
	Wavelength [ $\lambda_2$ ] (nm)	632,8	
	Scan Angle (°)	41 ±16	
	$R_{avg}(\lambda_1)$ @45° s+p-pol (%)	> 99,5	+/- 0,5 %
	$R_{avg}(\lambda_2)$ @45° r-pol (%)	> 70,0	+/- 2,5 %
	Phase Shift (°)	n.d.	
	Powerdensity (kW/br)	n.d.	LIDT (@ 1064nm CW)
	Damage Treshold Energy Density (J/cm <sup>2</sup> )	8,0	for pulsed 1064nm radiation 10 ns, 1 kHz

LIDT = laser induced damage threshold typically given as  
x-Watts per linear millimeter of beam radius (br) (1/e<sup>2</sup> intensity points) ±10%  
at 45° Angle of Incidence.

Transmission edges can vary ~ 2% of the given wavelength.

All data given for lab.-conditions 20...25°C, at higher temperatures thermal shifts will occur.

n.d. = not defined

COATING characteristics	SCANcoat 960-H		
Adhesion	MIL-F-48616	§ 4.6.8.1	Tape Test: peel off medium grade
Humidity	MIL-F-48616	§ 4.6.8.2	Storage 49°C : 100 % RH min. 24 h
Abrasion	MIL-F-48616	§ 4.6.8.3	"cheesecloth", 50 times pulles with force 450 g over the surface
Temperature	MIL-F-48616	§ 4.6.9.1	Typ ambient use: -20 ... 80 °C storage -61°C ... 72°C for min. 2 h
Cleaning:	carefully	With pure chemical analytical reagent grade di-Water, Alcohol iso-Propanol, Aceton	

Use an air bulb to blow off any loose contaminants from the surface before proceeding to the cleaning steps.

- I. Damp an unused cotton swab or a cotton ball with acetone or iso-propanol (purity-grades 99.99).
- II. Gently wipe the surface with the damp cotton. Do not rub hard.
- III. Drag the cotton across the surface just fast enough so that the liquid evaporates right behind the cotton.  
This should leave no droplets or streaks.

Note: Use only paper-bodied cotton swabs and high-quality surgical cotton balls.

The specification or data herein contained are only given for indication, without any undertakings whatsoever. The content of this brochure is generally not binding and does not substantiate any claims for liability or other legal claims. All given information such as values or dimensions and specifications are approximate values only and without obligation. Their publication does not suggest the matter is free of any rights whatsoever. Furthermore, due to constant evolution of techniques and norms, we reserve the right to modify, at any time, the characteristics and specifications contained in this document. MERSEN refuses all and any responsibility concerning their use whatever the purpose or application. Any copy, reproduction or information herein contained, in whole or in part, made without MERSEN written consent, is forbidden according to the laws of France and particularly the law nr. 92-597 of July 1st 1992 relating to the copyright.

#### Please Contact:

**MERSEN Deutschland Holding GmbH & Co. KG**  
Niederlassung München  
Rupert-Mayer-Str.44  
D-81379 München  
Germany

Phone: +49 (0) 89 780 7239 0  
Fax: +49 (0) 89 780 7239 211  
E-Mail: [info@optoSiC.com](mailto:info@optoSiC.com)  
[www.optosic.mersen.com](http://www.optosic.mersen.com)